

# Perform Breath Test Using SCRAM Remote Breath Device



## Purpose

This quick sheet provides you with all of the information necessary to perform a scheduled or on-demand breath test using the SCRAM Remote Breath device. An on-demand breath test is an unscheduled test issued by your supervising authority. If you have been set up to receive text message notifications, you will receive a text message when an on-demand test is initiated. For both of these types of tests, the device will automatically power up and give you an audio indication to take the test.


If directed to manually turn on the device or if you have the option to initiate your own breath tests, press the **Power** button on the device for approximately five seconds until the battery light turns **green**. In a short period of time, the device will prompt you to take the test.

## Procedure

To perform a breath test when prompted:

1. Firmly insert the breath tube into the breath tube port.

When properly installed, the breath tube should be flush with the back wall of the port and cannot be pushed any further.

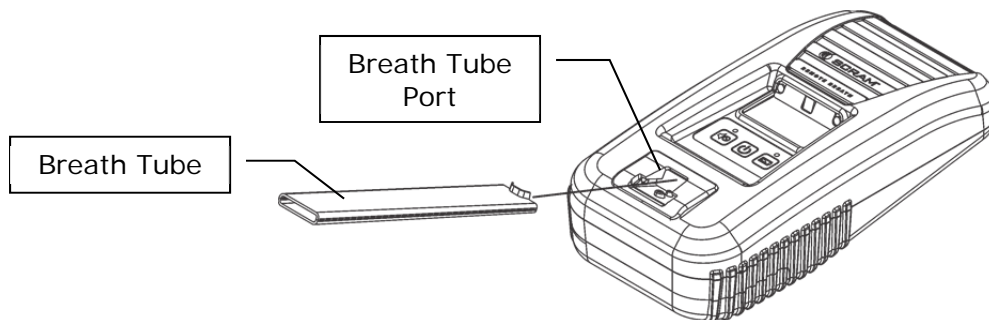

2. Before blowing into the breath tube.
  - Be in a well-lit area away from direct sunlight.
  - Remove hats, sunglasses, and any hair hanging over the face.
  - Stand with your back to a wall, hold your head upright, and look directly forward.
  - Hold the device up to your mouth with the breath tube level with the floor.



# Perform Breath Test Using SCRAM Remote Breath Device

---

3. When the device displays BLOW:

- a. Take a deep breath.
- b. Blow into the breath tube at a consistent air volume.
- c. Continue to blow until STOP is displayed.

At this time:

- The device displays ANALYZING DATA.
- Once analysis is complete, the device displays TEST COMPLETE, then TRANSFERRING DATA, then SHUTTING DOWN.